

## To RESET After an Alarm

If the display shows 'SYSTEM ALERTS', follow the steps described in 'To DISPLAY the causes of System Alerts' above, before attempting to reset.

### USER Reset

Once the alarm has been silenced (see above), the system will need to be reset.



NOTE

If the system has been programmed to be reset by an Engineer, pressing **Reset** will not return the display to normal, if this is the case see ENGINEER Reset (page 20) for details.

The system may have been programmed to be reset by Anti-code, if this is the case, see ANTI-CODE Reset (page 20) for details.

To reset the alarm, proceed as follows:

Enter a valid User code **?** **?** **?** **?**

Do you want to  
Arm system?

Press **Reset**

The external strobe will stop, the system will chime  
and the display will return to normal.

### ENGINEER Reset

If the system has been programmed to be reset by an Engineer following an alarm activation, you will still be able to silence the alarm by entering a valid User code (see page 20 for details).



NOTE

The system cannot be armed again until the alarm has been reset.

To reset the alarm, proceed as follows:

Contact the telephone number on the display (if programmed) or  
the telephone number on the last page of this User Guide.

**ANTI-CODE Reset**

If the system has been programmed to be reset using an Anti-Code following an alarm activation, you will still be able to silence the alarm by entering a valid User code (see page 20 for details).



The system cannot be armed again until the alarm has been reset.

To reset the alarm, proceed as follows:

Enter a valid User code ( ? ) ( ? ) ( ? ) ( ? )

Press RESET for Anti-code

Press (Reset)

The display will show a random code number i.e. 4281

Quote > 4281  
Reply > ----

Contact the telephone number on the display (if programmed) or the telephone number on the last page of this User Guide and quote the random code number.

You will be given a 4-digit Anti-Code i.e. 5624

Enter the Anti-code that has been given to you ( ? ) ( ? ) ( ? ) ( ? )

Quote > 4281  
Reply > 5624

Press (Yes)

If the Anti-code is correct, the keypad will chime to indicate that the system has been reset and the display will return to normal.

## To OMIT Zones

It is possible to exclude (omit) individual zones when arming i.e. if a zone is 'in fault'. Users with access to this function can only omit zones that have been programmed as 'Omittable'.



If the zone can be omitted, there will be a star to the right of the zone number. Only zones that have the 'Omit' attribute assigned to them can be omitted.

A star will appear to the left of the zone number to indicate that the zone has been selected for omitting.

All omitted zones will be automatically reinstated the next time the system is disarmed, unless programmed otherwise.

To re-instate zones manually, simply follow the instructions again. However, when the **Omit** key is pressed this time, the zones will be re-instated.

To omit zones when arming, proceed as follows:

Enter a valid User code **?** **?** **?** **?** and press **Omit**

```
Zone 001*Secure
Front Door >
```

Enter a zone number **?** **?** **?** or use the **↕** key to search

```
Zone 010*Active
Lounge Detector >
```

Press **Omit** to omit the selected zone

```
Zone*010*Active
is Omitted
```

```
Zone*010*Secure
Lounge Detector >
```

Repeat for other zones if required

Press **Menu** when finished

```
Do you want to
Arm System?
```

**Continue to arm the system as normal**

The selected zones are now omitted (the omit light will be on).