

To OMIT Zones

It is possible to exclude (omit) individual zones when arming i.e. if a zone is 'in fault'. Users with access to this function can only omit zones that have been programmed as 'Omittable'.



If the zone can be omitted, there will be a star to the right of the zone number. Only zones that have the 'Omit' attribute assigned to them can be omitted.

A star will appear to the left of the zone number to indicate that the zone has been selected for omitting.

All omitted zones will be automatically reinstated the next time the system is disarmed, unless programmed otherwise.

To re-instate zones manually, simply follow the instructions again. However, when the **Omit** key is pressed this time, the zones will be re-instated.

To omit zones when arming, proceed as follows:

Enter a valid User code **?** **?** **?** **?** and press **Omit**

```
Zone 001*Secure  
Front Door >
```

Enter a zone number **?** **?** **?** or use the **◆** key to search

```
Zone 010*Active  
Lounge Detector >
```

Press **Omit** to omit the selected zone

```
Zone*010*Active  
is Omitted
```

```
Zone*010*Secure  
Lounge Detector >
```

Repeat for other zones if required

Press **Menu** when finished

```
Do you want to  
Arm System?
```

Continue to arm the system as normal

The selected zones are now omitted (the omit light will be on).