


### To Bypass a Zone (must have code to do this)

Display will read 'READY and display the time' or 'READY MEMORY'

1. Press >> twice, the display will read 'USER SETTING'.
2. Press the 'OK' button, the display will read 'ENTER CODE \*\*\*\*' once the code has been entered, the display will read 'SET BYPASS'.
3. Press the 'OK' button the display will read 'FRONT DOOR'.
4. Press the '>>' button, until the display shows the Zone you want bypassed.
5. Press the 'OK' button, the panel will say 'OK TO BYPASS'.
6. Press the 'OK' button to bypass that Zone, the panel will bleep 4 times & confirm bypass.
7. To bypass another Zone, follow steps 4 to 6 again.
8. Press 'AWAY'  button (top right-hand corner button), the display will read 'OK' TO EXIT'.
9. Press the 'OK' button, the display will read 'READY and display the time'.  
The alarm panel will say 'Disarm, ready to arm'.

NOTE: All omitted zones will be automatically reinstated the next time the system is disarmed. Please follow the instructions again every time you require a zone to be bypassed.